

Hair clipper

User's manual

EN



SENCOR®

SHP 90

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with the use of similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user manual in a safe place for future use.

Keep the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

CONTENTS

| | |
|--|------|
| IMPORTANT SAFETY NOTICE | 3 |
| PRODUCT DESCRIPTION | 4 |
| INSTRUCTIONS FOR USE | 5 –6 |
| CLEANING AND MAINTENANCE | 6 |
| DISPOSAL OF USED BATTERIES | 7 |
| TECHNICAL SPECIFICATIONS | 7 |
| DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES | 8 |
| INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS | 8 |


IMPORTANT SAFETY NOTICE

- 1) This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 2) Children must be supervised to ensure that they do not play with the product.
- 3) Never use accessories that have not been delivered with this product or are not intended for it.
- 4) Under no circumstances should you try to repair or amend the product on your own - danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty.
- 5) Never use the product if you have wet hands or feet.
- 6) Keep and store the product away from flammable or volatile substances.
- 7) Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 8) Do not place the product near heaters, open fires or other appliances or equipment that are sources of heat.
- 9) This product is designed for household use. Do not use in industrial surroundings or outdoors!
- 10) Never use this product on animals.
- 11) Do not use the product for purposes other than those intended.
- 12) Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or in any other liquid.
- 13) Never use the product near a bathtub, wash basin or any other container filled with water.
- 14) Use extra care if the product is used near children. Always keep the product away from the reach of children.
- 15) Do not use this product on open wounds, cuts, sunburns or blisters.
- 16) Keep this product at a safe distance from hair and eyes.
- 17) If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- 18) For plugging the product into the mains socket, use only the type of adaptor included with the product. Never use a different type of adapter with the product
- 19) The manufacturer takes no responsibility for damages caused by incorrect use of the product and its accessories

Hair clipper

SHP 90

PRODUCT DESCRIPTION

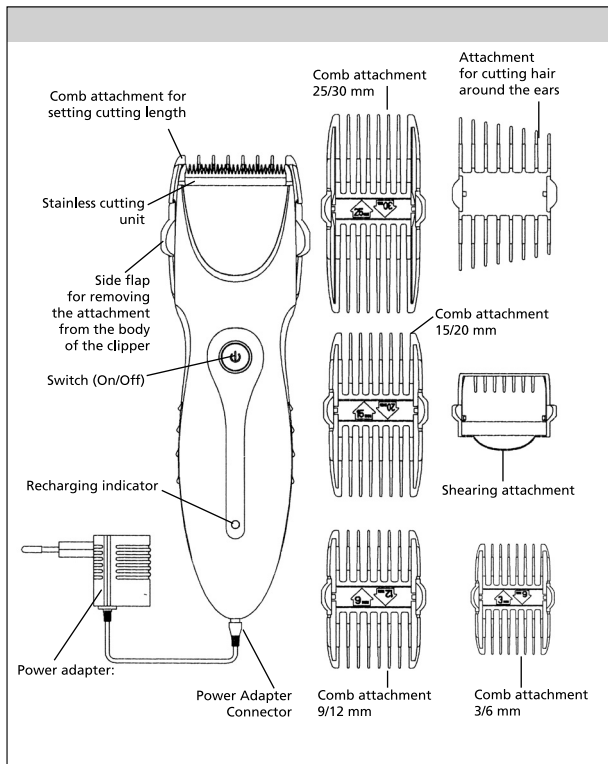

HAIR CLIPPER INSTRUCTIONS

The hair clipper can be used either cordless or can be powered from the mains.

Using the power adapter:

If you want to use the hair clipper immediately, connect the power adapter and plug the adapter into a suitable power outlet (230 V).

Recharging batteries:

Before first use and also for all future recharging, the device should be recharged for a time of 12 hours.

Insert the power adapter connector into the jack on the underside of the hair clipper and then insert the power adapter into a 230V power outlet. The recharging process is indicated by a small red recharging indicator. When fully charged, the clipper may be used for approximately 45 minutes.

Tip:

To ensure a long battery life, you should fully discharge the batteries before recharging. Discharge the battery by using the device until it stops working.

Operation

Before using the hair clipper:

The hair to be cut should be clean and dry or wet. Hair should be thoroughly combed and without knots. Put a towel around your neck so that cut hair does not fall behind your collar.

Using the hair clipper:

- 1) Select one of four comb attachments to select the length of the cut. The comb attachments are available in lengths of 3/6 mm, 9/12 mm, 15/20 mm and 25/30 mm.
- 2) You may also use a special slanted attachment for cutting hair around the ears or a so called shearing attachment. Using the shearing attachment you may reduce the volume of hair without changing their length.
- 3) Click in the comb attachment into the side lugs in the upper part of the hair clipper with the required cut length in the upward direction. The length of the cut is always imprinted on the inner side of the attachment.
- 4) Before commencing to cut, ensure that the attachment is firmly attached to the body of the clipper.
- 5) Turn on the ON/OFF switch and commence to cut.
- 6) After you have finished cutting, turn off the clipper with the ON/OFF switch on the body of the clipper and by unfastening one of the side sections of the comb attachment you can remove the attachment from the body of the clipper.

**Tip:**

We recommend not to initially cut your hair or beard too short.

CLEANING AND MAINTENANCE

It is best to clean the cutting unit and the comb attachments after each cutting, so as to avoid its excessive fouling with hair and whiskers.

Cleaning the body of the clipper:

You can clean the body of the hair clipper using a lukewarm moist cloth. Do not use harsh cleaning fluids, paint thinners or solvents. These can damage the surface of the appliance.

**Caution:**

Do not submerge the body of the hair clipper under water because it contains parts under live current (recharging battery)!

Cleaning of the cutting head:

- 1) Turn off the clipper and if the power adapter is connected remove it from the power outlet and from the clipper.
- 2) Remove the comb attachment from the device. Using your thumb push the cutting unit back and pull it out.
- 3) Using the cleaning brush supplied, remove the remaining hairs from the cutting head.
- 4) After the cutting unit is fully cleaned, insert it back into the device by placing the bottom lug on the cutting head into the bottom opening in the upper part of the hair clipper body, then firmly press on the cutting head until you hear a click.

Lubricating the head:

- 1) Remove the comb attachment from the device. Using your thumb push the cutting unit back and pull it out.
- 2) Place one or two drops of the supplied oil in between the cutting blades and spread it evenly. After using up the supplied oil use only oil not containing acids (e.g. oil for sewing machines).
- 3) Wipe off excess oil using a cloth.
- 4) Then insert the cutting head back into the device by placing the bottom lug on the cutting head into the bottom opening in the upper part of the hair clipper body, then firmly press on the cutting head until you hear a click.

DISPOSAL OF USED BATTERIES

Rechargeable batteries are included with this product. Used batteries do not belong in domestic waste.

Dispose of batteries at designated battery disposal points.

TECHNICAL SPECIFICATIONS

Power adapter:

Input voltage230 V AC (alternative), 50 Hz

Output voltage3 V DC (direct), 1 000 mA

Protection category (relating to protection against injury by electric shock):.....II

Body of the clipper

Batteries2xAA Ni-MH, 600 mAh (integrated)

Operating time per charging45 minutes

Protection category (relating to protection against injury by electric shock):.....II

Noise level60 dB(A)

The declared noise emission level for this appliance is 60 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Supplied contents

- 1) Hair clipper
- 2) Power adapter:
- 3) 4 Comb attachments
- 4) 1 right/left attachment for cutting around the ears
- 5) Shearing attachment
- 6) Cleaning brush
- 7) Oil for cutting unit
- 8) User's manual
- 9) Guarantee

Text and technical parameter changes reserved.

DISPOSAL OF USED ELECTRICAL & ELECTRONIC EQUIPMENT

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Discard the used packaging material at a site designated for waste in your locale.



This device conforms with EU rules and regulations regarding electro-magnetic and electrical safety.